



Mapping Ground Water Rule requirements: Introduction to the rule

This is the first in a series of five articles by the U.S. Environmental Protection Agency (EPA), Office of Ground Water and Drinking Water (OGWDW) that summarize key components of the Ground Water Rule (GWR). As with all drinking water rules, please check with your primacy agency for specific, state-related requirements.

Disclaimer: This article is not a rule and is not legally enforceable. As indicated by the use of non-mandatory language such as “may” and “should,” it does not impose any legally binding requirements. This article describes requirements under existing laws and regulations and does not replace any existing established laws or regulations.

The GWR is flexible in that it requires state involvement to ensure systems are compliant. EPA encourages GWSs to openly discuss GWR requirements with state authorities to ensure compliance with state regulations.

What is the purpose of the Ground Water Rule?

The GWR became effective Dec. 1, 2009, and applies to public water systems relying on ground water sources and systems that introduce ground water directly to the distribution system without treatment equivalent to the treatment provided to surface water.

The purpose of the rule is to provide increased protection against microbial pathogens in public water systems that use ground water sources. EPA is particularly concerned about harmful viruses and bacteria. EPA uses fecal contamination as an indicator of the presence of pathogens in the aquifer that may affect public health, including the health of sensitive groups, such as the elderly, pregnant women, children, and individuals with compromised immune systems.

Examples of viral pathogens that have been found in ground water sources include enteric viruses such as Echovirus, Hepatitis A and E, Rotavirus and Noroviruses (i.e., Norwalk-like viruses); and enteric bacterial pathogens like Escherichia coli (including

continued on next page

Glossary of terms

Ground water system (GWS): A public water system that relies on ground water sources; any system that mixes surface and ground water if the ground water is added directly to the distribution system and provided to consumers without treatment.

Community water system (CWS): A public water system serving at least 15 service connections used by year-round residents or regularly serving at least 25 year-round residents.

Non-transient non-community water system (NCWS): A public water system that is not a CWS and that regularly supplies water to at least 25 of the same people at least 6 months per year.

Transient non-community water system (TNCWS): A non-community water system that does not regularly serve at least 25 of the same persons over six months of the year.

Consecutive system: A public water system that receives some or all of its finished water from one or more wholesale systems.

Wholesale system: A public water system that treats source water, as necessary, to produce finished water and then delivers some or all of that water to another public water system.



Photo courtesy of Elba3 Photography

continued from previous page

E. coli O157:H7), *Salmonella* species, *Shigella* species, and *Vibrio cholerae*. Ingestion of these and/or other pathogens can cause gastroenteritis or, in certain rare cases, serious illnesses such as meningitis, hepatitis, or myocarditis.

It is estimated that the GWR will prevent approximately 42,000 cases of viral illness and one related death annually.

Like the Stage 2 Disinfectants and Disinfection Byproducts Rule (Stage 2 DBPR) and Long-Term 2 Enhanced Surface Water Treatment Rule (LT2ESWTR), the GWR highlights the relationship between wholesale and consecutive systems. Some GWR requirements specify that wholesale and consecutive systems communicate with one another in order to comply with the rule.

Ground Water Systems: Critical deadlines and requirements

The GWR is a targeted, risk-based regulation. The rule relies on four major components that went into effect Dec. 1, 2009, as shown in Table 1.

The requirements that a GWS must follow under the GWR are based on whether the GWS provides at least 4-log treatment, as follows:

continued on next page

Table 1. GWR Rule Requirement Components

GWR Component	Description of Requirement Effective December 1, 2009
Source water monitoring	If a system does not provide 4-log treatment and is notified of a total coliform-positive sample collected under the Total Coliform Rule (TCR), it must conduct triggered source water monitoring. These water systems may also be directed by their state to conduct additional and/or assessment monitoring.
Compliance monitoring	Submit written notification ¹ to the state if the system intends to provide at least 4-log treatment, and begin conducting compliance monitoring ² .
Sanitary surveys	Provide the state with any existing information that will enable the state to conduct a sanitary survey.
Corrective action	Complete the task or action required by the state in the event that a) the state identifies a significant deficiency, or b) a triggered source water monitoring sample or one of the five additional ground water source samples tests positive for fecal contamination.

- ¹ Written notification must include engineering, operational, or other information that the state requests to evaluate the submission.
- ² If the system has not submitted written notification and/or received approval from the state by the Dec. 1, 2009, deadline, the system must conduct triggered source water monitoring until the notification is submitted and approved.

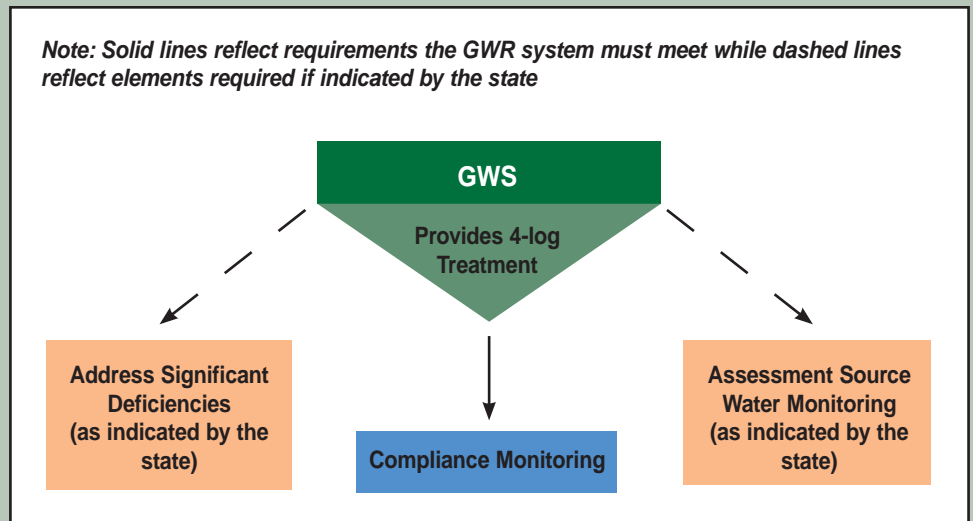


Figure 1. GWR Requirements for Systems Providing 4-log Treatment

continued from previous page

1. GWSs that consistently and reliably provide at least 4-log virus inactivation, removal, or a state-approved combination of these technologies before or at the first customer have the option of conducting compliance monitoring, as illustrated in Figure 1.
2. GWSs that do not provide at least 4-log virus inactivation, removal, or a state-approved combination of these technologies before or at the first customer must comply with the triggered source water monitoring provision of the rule, as illustrated in Figure 2.

There are some GWR requirements that apply to all GWSs and that are not dependent on whether treatment is provided. These include resolving significant deficiencies, completing corrective action, and

continued on next page

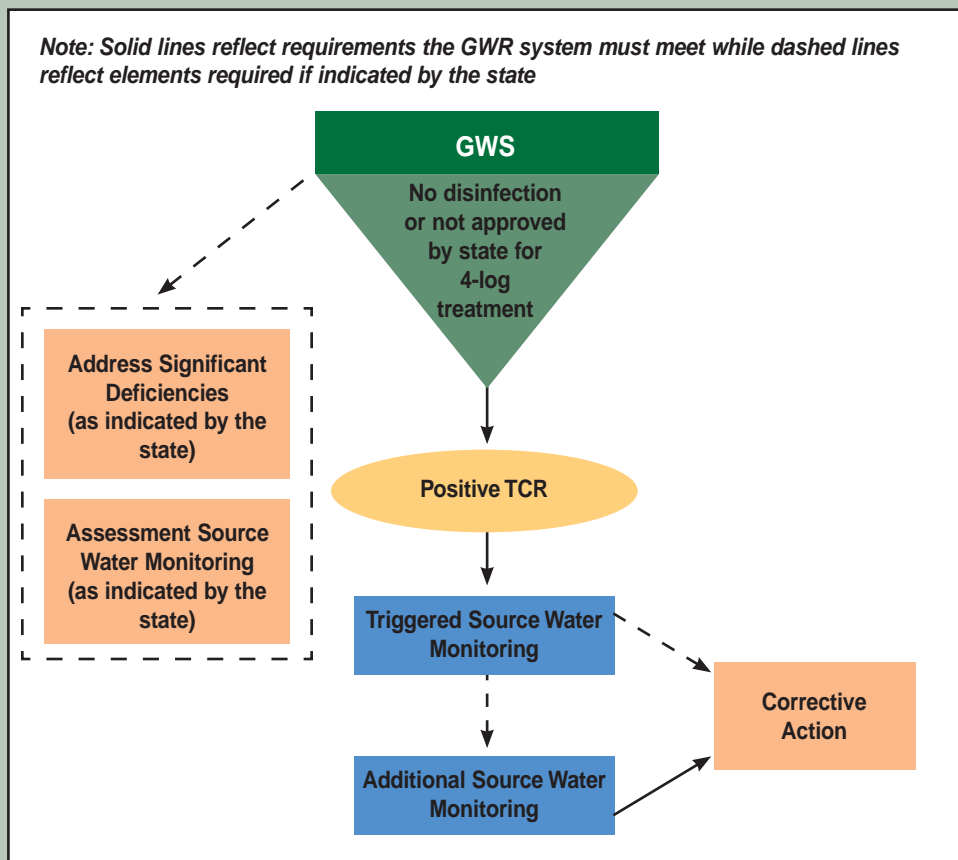


Figure 2. GWR Requirements for Systems Not Providing 4-log Treatment

Frequently asked questions regarding the Ground Water Rule

Q: Does the GWR require all GWSs to disinfect?

A: No. The requirements of the rule are based on the level of treatment the GWS provides. If the system reliably provides 4-log treatment of viruses and wants to conduct compliance monitoring, it will have to submit a notice, get approval, and monitor for disinfectant residual at or before the first customer as described in Figure 1. If the system provides less than 4-log treatment of viruses, the GWS will need to comply with the triggered source water monitoring requirements as described in Figure 2.

Q: What is the first deadline that GWSs have to comply with?

A: GWSs must have informed their primacy agencies if they reliably provide 4-log level of treatment and want to conduct compliance monitoring by Dec. 1, 2009. If they do not meet the specified level of treatment, the system had to begin conducting triggered source water monitoring by the Dec. 1, 2009, deadline. See Table 1 for more detailed information.

A GWS that places a new ground water source in service after Nov. 30, 2009, is not required to meet the triggered source water monitoring requirements because the system provides at least 4-log treatment. The GWS must notify the state in writing that it provides 4-log treatment for the new ground water source and begin compliance monitoring.

Q: Are there any tools available to help me calculate whether my water system meets the 4-log treatment requirement?

A: Yes. EPA has developed a tool that will assist GWSs in determining whether they meet the 4-log treatment of viruses. It is at www.epa.gov/safewater/disinfection/gwr/compliancehelp.html (search for Ground Water Rule Contact Time Calculator on that page). States may have also developed their own tools, so check with your primacy agency for more information.





Photo courtesy of Lauri Murphy Logan

continued from previous page

follow-up and/or assessment source water monitoring.

Significant deficiencies, follow-up, and/or assessment monitoring are components of the GWR that the state may require at any time and do not have to be a direct result of a total coliform-positive (TC+) or fecal indicator-positive (FI+) sample. A significant deficiency can be identified at any time by the state but is typically found during a sanitary survey.

Follow-up and assessment monitoring consist of state-directed monitoring requirements used to determine the quality of the system's water source. Follow-up monitoring may be done in response to a TC+ sample result, and source water assessment monitoring can be requested at any time at the discretion of the state.

These requirements will be discussed in more detail in the next four articles. ■

Later in this series of articles

The goal of this series of short articles is to help ground water systems (GWSs) navigate their way through the Ground Water Rule (GWR) requirements. This is the first article in the series in which systems will be introduced to some of the key elements of the rule. A summary of the remaining articles is provided below.

- Article 2: Triggered source water monitoring
Triggered source water monitoring applies to systems that do not provide 4-log treatment of viruses and are notified of a total coliform-positive sample while collecting routine samples under the Total Coliform Rule (TCR).
- Article 3: Compliance monitoring
An operator confirms through compliance monitoring that the treatment technologies installed to treat drinking water are reliably achieving 4-log treatment of viruses before or at the first customer.
- Article 4: Sanitary surveys and corrective action
Sanitary surveys require utilities to evaluate eight critical elements of a public water system as well as identify significant deficiencies that may exist at the water system. Corrective action will be required for any system with any significant deficiencies.
- Article 5: Ground Water Rule Public Notification and Consumer Confidence Report requirements for community and non-community water systems
The GWR has new public notification, special notice, and consumer confidence report requirements that affect community and non-community water systems, as well as wholesale and consecutive water systems.

Training opportunities

Currently EPA's headquarters has not scheduled any additional workshops or webcast trainings on the GWR. However, there still may be training events sponsored by your state, EPA region, or technical assistance providers. Contact your EPA region or state for more information on workshops or trainings that may be held near you. For more information on the GWR, please visit the GWR homepage at www.epa.gov/safewater/disinfection/gwr.

The next article in this series will cover GWR requirements for triggered and additional source water monitoring.